




Peep Window

FOR EVAPORATOR ARCH DOORS

HOLE PATTERN

MADE IN USA

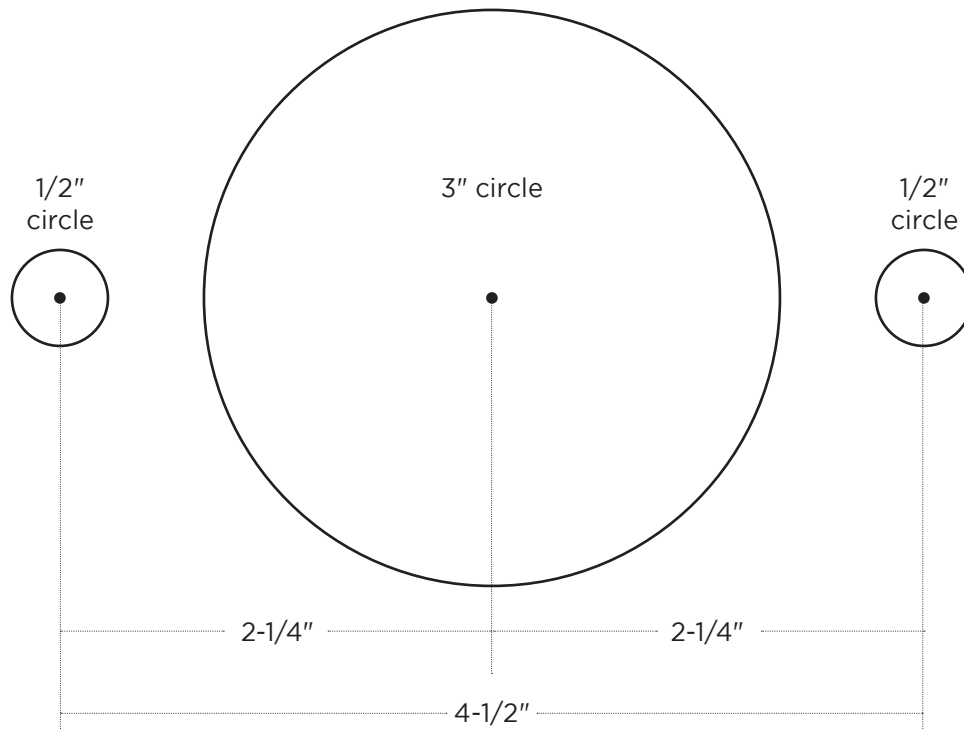

INSTALLATION

- Use the diagram above to draw the hole pattern on your arch door.
- Use a 3" hole cutter to drill the center hole. This is where you will insert the tube of the Peep Window.
- Use a 1/2" drill bit to drill the side holes for the bolts.
- Attach the Peep Window to the door using the bolts and washers provided. Gaskets are **not** required.



Check Out Our Demo
Video On YouTube.

